


RS485-1.8-USB Interface adapter

- Adapter USB 2.0 to serial RS 485, flying leads
- Speed up to 115.2 kb/s
- Easy installation

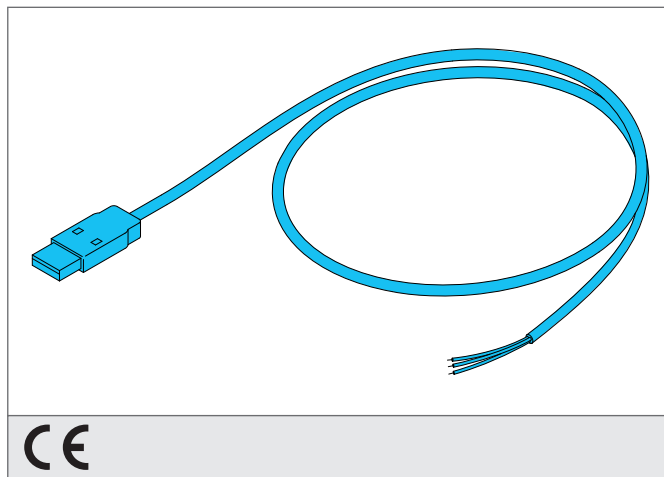


GND BK = Schwarz / black
Data-(B) YE = Gelb / yellow
Data+(A) OG = Orange / orange

Safety instructions

The Instruments are not to be used for safety applications, in particular applications in which safety of persons depends on proper operation of the instruments.

These instruments shall exclusively be used by qualified personnel.

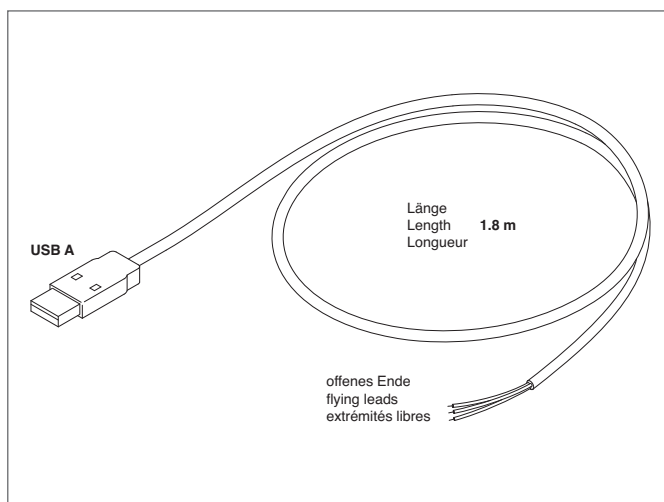[illegible]